

AIRVO

Parts Guide 1

Airvo System Set Up

- 1) Nasal Prongs
- 2) Circuit (Patient End)
- 3) Circuit (Machine End)
- 4) Humidifier Pot
- 5) Tubing connecting oxygen to machine
- 6) Oxygen Tubing
- 7) Sterile Water Bag



AIRVO

Parts Guide 2

Oxygen Flowmeter


- 8) Oxygen Flowmeter
- 9) Oxygen Tubing

Back of Airvo

- 10) Circuit
- 11) Oxygen Tubing
- 12) Tubing connecting oxygen to machine
- 13) Air Intake & Air Filter
- 14) Power Cord

Airvo Controls

- 15) Display Screen
- 16) Power Button
- 17) Alarm Silence Button
- 18) "Play" Button

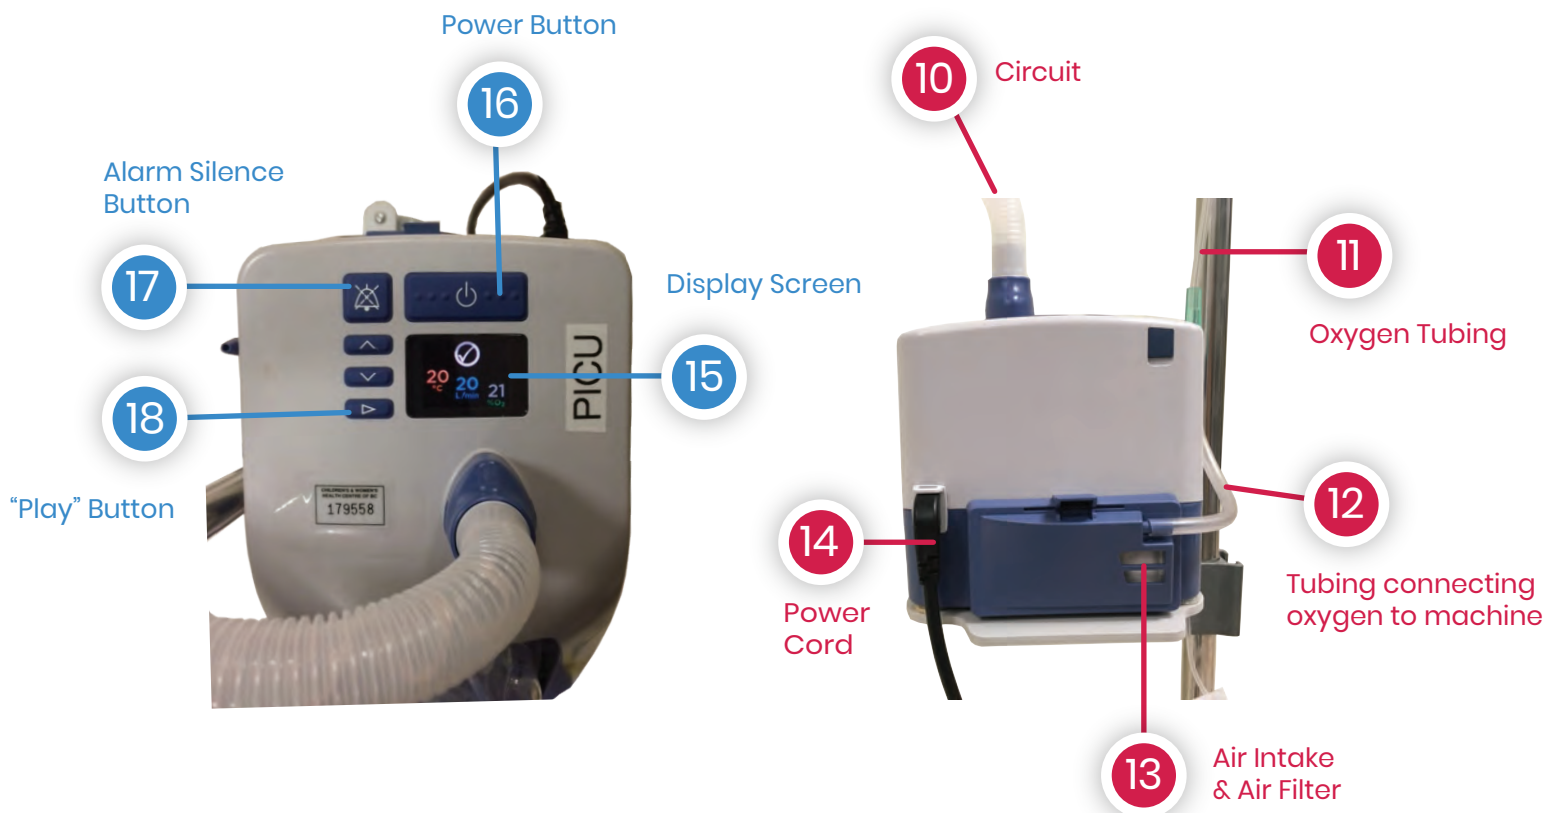

Site to Source : Airvo Troubleshooting Quick Guide

Follow These Checking Steps Every Hour

What to Check

First check to see if...

- Are the nares both patent?
- Are the prongs patent?
- Are the prongs kinked/stretched/broken/torn?
- Are the prongs sitting correctly in the nares?
- Are the prongs the proper size (50% of nare diameter)?



Nares & Nasal Prongs

Then proceed to...

- Are the prongs connected tightly to the circuit?



Circuit Connection

Then proceed to...

- Is the circuit connected to the machine?



Circuit Connection

Then proceed to...

- When scrolling through the patient settings with the "Play" button, are the settings correct?



"Play" Button

Then proceed to....

- Is the back of the machine clear of any obstruction?
- Is the machine plugged into a power outlet?



Air Intake & Air Filter

IF the patient is on oxygen...

- Is the oxygen tubing connected to the green tee on the side of the machine?
- Is the oxygen tubing connected to the flowmeter?
- Is the correct oxygen flow set?



Oxygen Tubing Connection



Finally, if your patient is still desaturating or distressed despite checking the above things, call RT using Vocera by saying the code "Call Floor RT"